


# 33402-01-00 Installation Instruction

## RIK Figura Wall tap set w. Divert

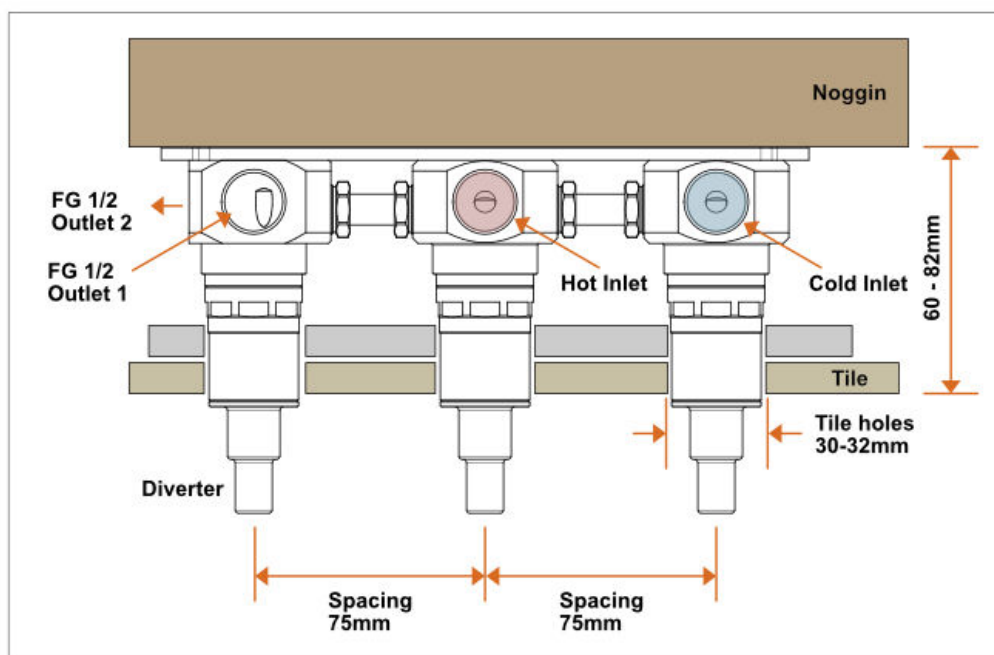

Top View 34402

### Installation of Rough in Kit.

1. Calculate the height to mount the rough in kit to ensure spouts etc work with bathroom furniture and sanitary installation
2. Set the noggin at a suitable depth behind finished tile face (60-82mm) This is important and care should be taken to allow for wall board, tile or stone, glue etc.
3. Fasten the rough in kit to the noggin with the outlets to the left and ensure it is level and well secured
4. Plumb Cold water to the right-side inlet and Hot to the left inlet (far left is the outlet) see diagram
5. Note these rough in kits are factory pressure tested. For site testing of water lines ensure both valves are in the "off" position prior to pressuring the lines (to check if off, remove the dust caps temporarily and ensure splined spindles are rotated anti-clockwise) Replace dust caps.
6. Do not remove dust caps or black sleeves as these protect the valves and allow for plaster/board sealing against the body
7. Fit wall board and waterproof seal up against the sleeves
8. Lay tiles being careful to cut clean neat holes with a diamond hole saw 30-32mm diameter spaced and aligned exactly with the sleeves.
9. Grout up to the sleeves