


# 33406-01-00 Installation Instruction

## RIK Figura Dual shower

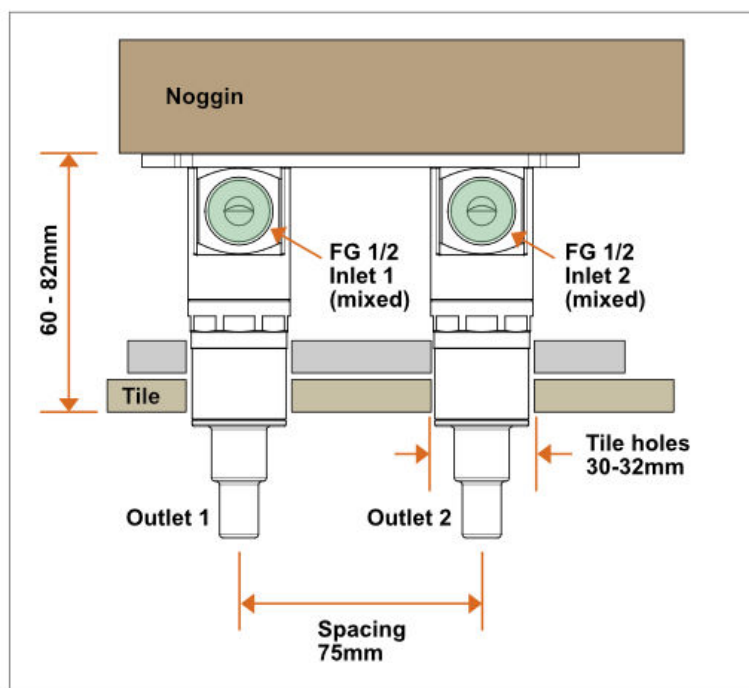

Top View 34406

### Installation of Rough in Kit.

1. Calculate the height to mount the rough in kit to ensure spouts etc work with bathroom furniture and sanitary installation
2. Set the noggin at a suitable depth behind finished tile face (60-82mm) This is important and care should be taken to allow for wall board, tile or stone, glue etc.
3. Fasten the rough in kit to the noggin with the FG ½ inlets at the top
4. Plumb up the 2 outlet bodies. These are plumbed with mixed water from a suitable mixer or diverter tap (separate)
5. Do not remove dust caps or black sleeves as these protect the valves and allow for plaster/board sealing against the body
6. Fit wall board and waterproof seal up against the sleeves
7. Lay tiles being careful to cut clean neat holes with a diamond hole saw 30-32mm diameter spaced and aligned exactly with the sleeves.
8. Grout up to the sleeves