


33407-01-00 Installation Instruction

RIK Figura Slide shower

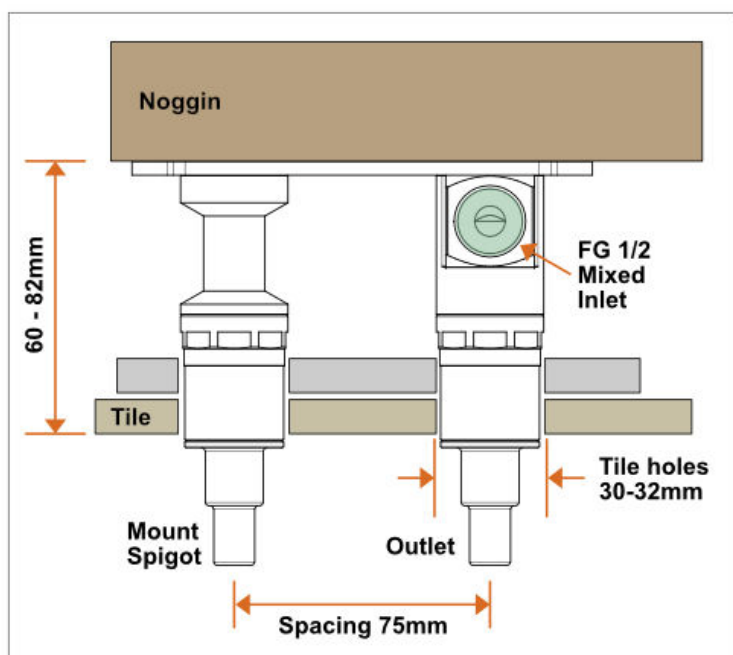

Top View 34407

Installation of Rough in Kit.

1. Calculate the height to mount the rough in kit to ensure spouts etc work with bathroom furniture and sanitary installation
2. Set the noggin at a suitable depth behind finished tile face (60-82mm) This is important and care should be taken to allow for wall board, tile or stone, glue etc.
3. Fasten the rough in kit to the noggin with the outlet to the right and ensure it is level and well secured
4. Plumb up the outlet body. This is plumbed with mixed water from a suitable mixer (separate)
5. Do not remove dust caps or black sleeves as these protect the valves and allow for plaster/board sealing against the body
6. Fit wall board and waterproof seal up against the sleeves
7. Lay tiles being careful to cut clean neat holes with a diamond hole saw 30-32mm diameter spaced and aligned exactly with the sleeves.
8. Grout up to the sleeves